

Maintenance Schedule for all Triad Trailers

All tasks in highlighted cells must be performed as indicated intervals

Item	Function Required	Weekly	3 Months or 3000 Miles	6 Months or 6000 Miles	12 Months or 12000 Miles
Brakes	Test that they are operational.	At Every Use			
Brake Adjustment	Adjust to proper operating clearance.				
Brake Magnets	Inspect for wear or current draw.				
Brake Linings	Inspect for wear or contamination.				
Brake Controller	Check for correct amperage & modulation.				
Brake Cylinders	Check for leaks, sticking.				
Brake Lines	Inspect for cracks, leaks, kinks.				
Trailer Brake Wiring	Inspect wiring for bare spots, fray, etc.				
Breakaway System	Check battery charge and switch operation.	At Every Use			
Hub/Drum	Inspect for abnormal wear or scoring.				
Wheel Bearings & Cups	Inspect for corrosion or wear. Clean & repack.				
Seals	Inspect for leakage. Replace if removed.				
Springs	Inspect for wear, loss of arch.				
Suspension Parts	Inspect for bending, loose fasteners, wear.				
Hangers	Inspect Welds.				
Wheel Nuts and Bolts	Tighten to specified torque values.				
Wheels	Inspect for cracks, dents or distortion.				
Tire Inflation Pressure	Inflate tires to mfg's specifications.				
Tire Condition	Inspect for cuts, wear, bulging, etc.				